



How to Change the Hit Radius

The information in this tip applies to:

- ExpertCAD (all versions)
-

SUMMARY

It is possible to change the hit radius. For information on what the hit radius is, please refer to the ExpertCAD manual.

MORE INFORMATION

By default, the hit radius is set to 10 pixels. It is possible to change the value of the hit radius as desired. To change the value of the hit radius, add the following line to the **expcad.cfg** file:

```
set HIT_RAD <NumberOfPixels>
```

For example, if you wanted a hit radius of 15 pixels this line would look like the following:

```
set HIT_RAD 15
```