

PROSPECTOR™

The Gold Standard In Toolmaking

Unable to Drop Points No Matter Which Mode You Are In

The information in this tip applies to:

- Prospector 6.0

ISSUE

You are unable to drop points on the screen no matter which mode you are in, in Prospector.

SUGGESTIONS

A very common cause for this issue is that your snap filter may not be set appropriately. For example, if your snap filter is set to **At Center of Nearest Arc** and there are no arcs then you wouldn't be able to drop any points.

To set the snap filter click on the **Tools** menu item, and go to **Profile Tools** and then **Snap Filter**.

